




3 conductor cable with TRS jack to plug into front panel foot switch jack socket

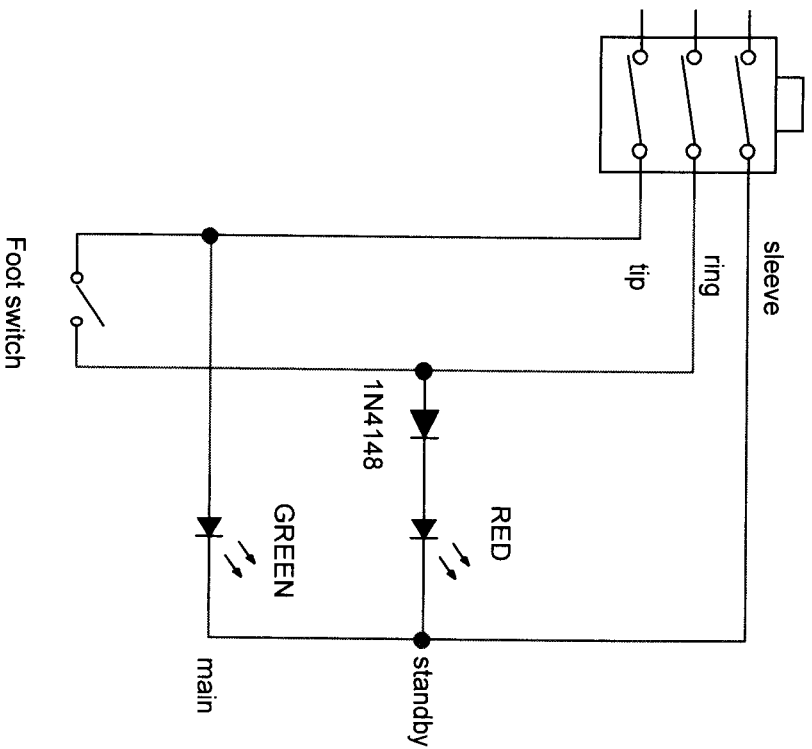

2 conductor cable with TS jack to plug into the front panel foot switch jack socket

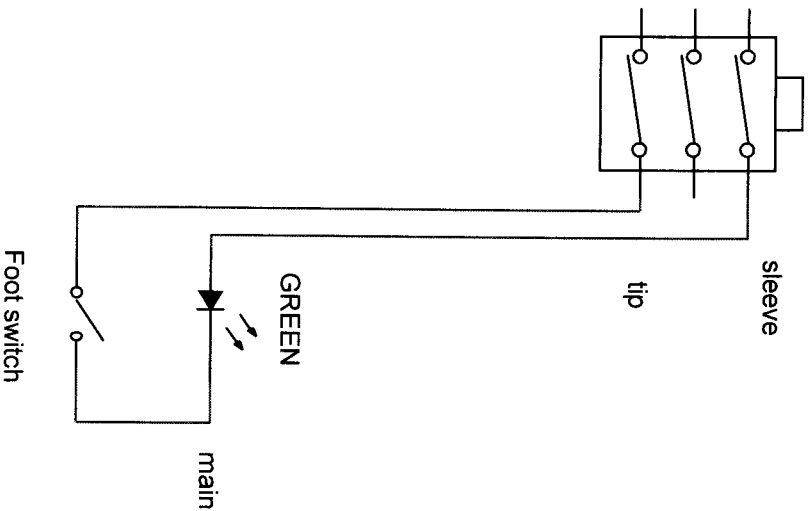

2 conductor cable with TS jack to plug into the rear panel LINK OUT jack socket

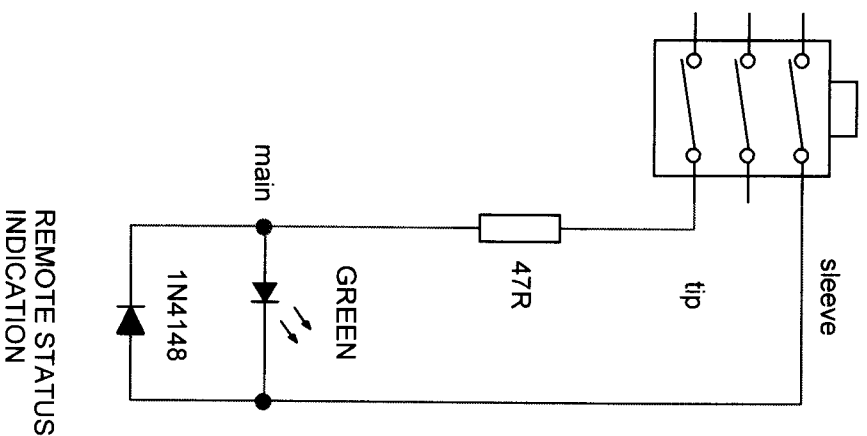

Any LED bright enough with 10mA current will be suitable



Switching DI Foot switch and LED indicators

JG Jun 2013
www.orchid-electronics.co.uk